

4 Post Mount Rack Fit Guide

Note:

A **positive** value indicates the answer to the corresponding question is **Yes**.

A $\underline{\text{negative}}$ value indicates the answer to the corresponding question is $\underline{\text{No}}$.

Question	<u>Formula</u>
Will the <u>outer rail</u> extend past the <u>rack</u> ?	26.60 + T - D
Will the <u>inner rail</u> extend past the <u>rack</u> ?	25.85 + B - D
Will the <u>inner rail</u> extend past the <u>server</u> ?	26.09 + B - L
Will the <u>server</u> extend past the <u>rack</u> ?	L - D - 0.24
<u>Variables</u>	 B = Server Ear to First Button D = Rack Mounting Depth L = Server Length T = Rack Upright Thickness

