



Boldly Creative



Expert Customer Service




Focus On Quality



Ships Same Day

PCI DSS Dual Lock Secure Server Bracket

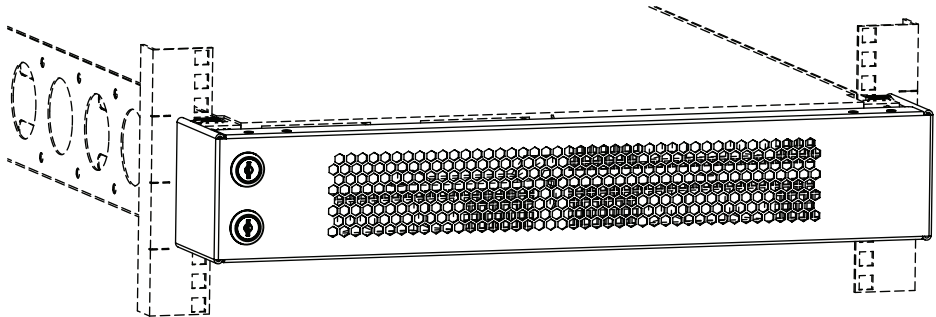

Installation Instructions

Kit P/N: 124-6909

Kit Contents



Kit Contents:

- (1) Secure Server Assembly
- (2) Server Attachment Brackets
- (1) Locking Bracket (Left)
- (1) Locking Bracket (Right)

Mounting Hardware:

- (8) 12-24 x .500 Pan Head Screw
- (8) 12-24 Cage Nut
- (4) 8-32 x .250 Countersink Screw
- (9) 10-32 x .500 Pan Head Screw
- (9) 10-32 Cage Nut

Secure Server Lock Installation Instructions

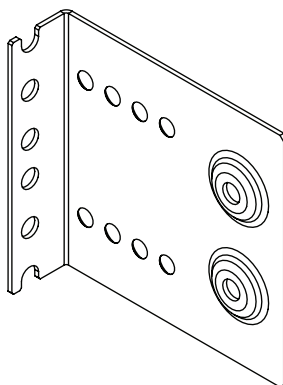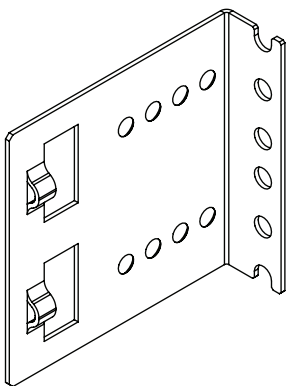


Left Locking Bracket

Right Locking Bracket

- Step 1 Determine the location you would like to mount the Secure Server Lock: Insert (4) Cage-Nuts into each the left & right rack posts. Be sure to center the Cage-Nuts between 2 U-spaces as shown. Use (4) 12-24 Screws per side to attach the Left and Right Secure Server Locking Bracket as shown below.


Note: Be sure to have the left and right brackets oriented correctly

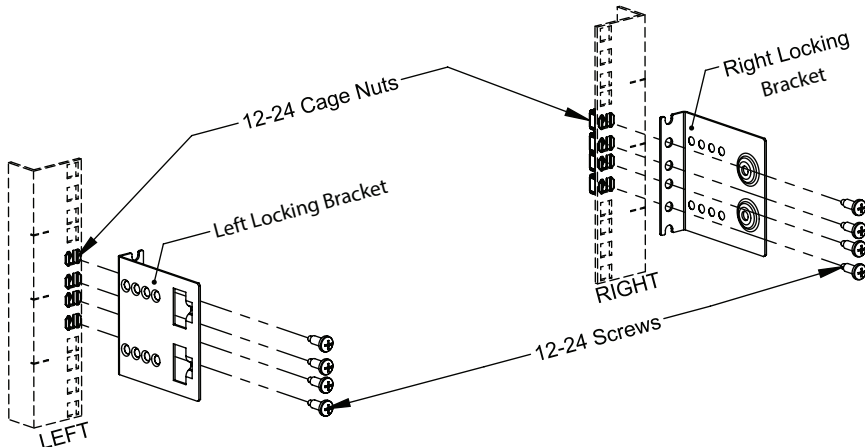


Secure Server Lock Installation Instructions

Step 2a Determine the thickness of the server ears that you are going to use: Measure the server ear thickness, and follow the table below for correct mounting location and orientation of the Server Attachment Brackets.


Server Ear Thickness	Mounting Location	Bracket Orientation
x - 1.7"	No Bracket	No Bracket
1.7"-1.51"	2	B
1.5"-1.31"	1	A
1.3"-1.11"	3	B
1.1"-0.91"	2	A
.7"- .51"	4	B
.5"- .31"	3	A

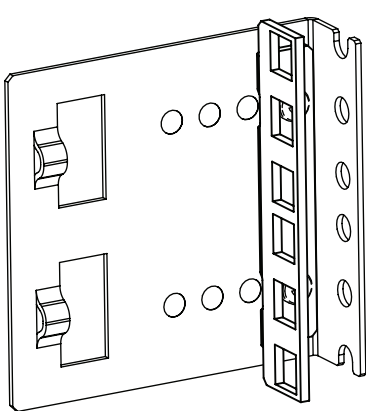

Bracket Orientation: A

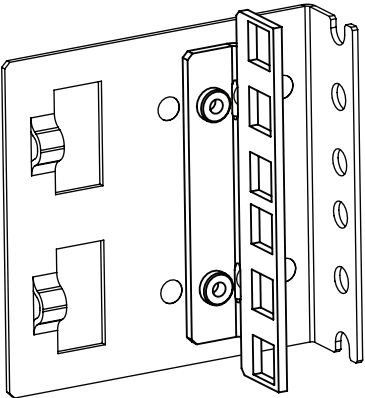


Bracket Orientation: B

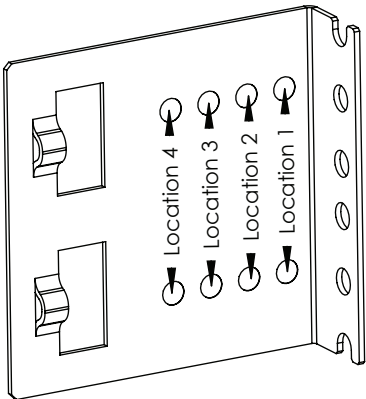

Mounting Locations

Step 2b Attach Server Attachment Brackets: Once location and orientation have been determined, attach the server attachment brackets to the left and right locking brackets using the (4) 8-32 Countersink Screws.

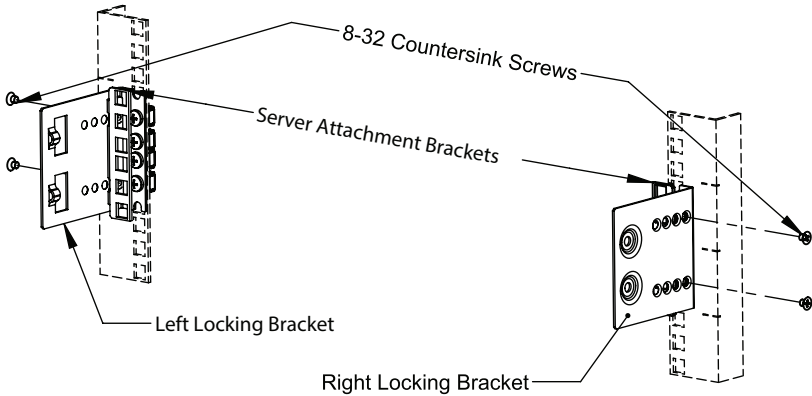


Step 3 Attach Server to the Attachment Brackets: Attach your selected server to the Attachment brackets through your preferred method. If using rails, follow the manufacturers installation guide.

Note: Use the Server Attachment Brackets as the new front mounting locations of your rack.

Step 4 Attach Secure Server Assembly: Once your server is installed, attach the secure server assembly by sliding over the locking brackets.

Note: Locks Must be on the LEFT side of the assembly.

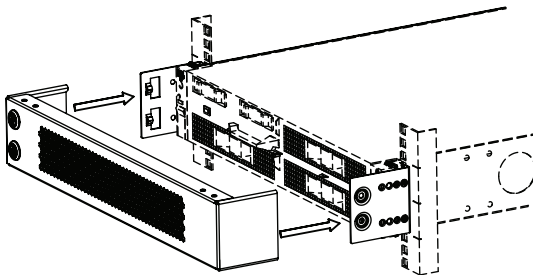

Warranty Statement

Innovation First, Inc. warrants our products against defects in material and workmanship for a period of one (1) year from the date of purchase. Innovation First, Inc. liability shall be limited to repairing or replacing, at our option, any defective product.