



Boldly Creative



Expert Customer Service




Focus On Quality



Ships Same Day

Secure Wall-Mount Racking System

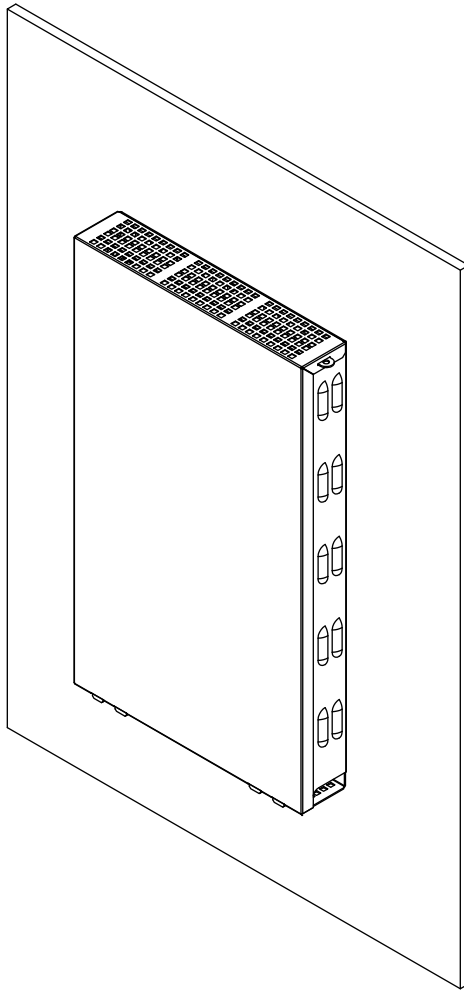

Installation Instructions
Kit P/N: 2URACK-116

Kit Contents

Brackets: 1URACK-110 Metal Components:

- (1) Rack Base
- (1) Rack Cover
- (1) Lock Bar

Wall-Mount Hardware Kit:

- (9) Drywall Anchors
- (9) 8-32 x 1.250 Pan Head Screws


Installation Instructions

Step 1. Determine the Mounting Location and Orientation: The mounting location should take into account server access, cable routing, and airflow. This rack system can be mounted in any orientation; horizontal, vertical, or any angle.

Be sure to take into account the space required for installing and removing the server.

Step 2. Mark the Mounting Locations on Wall: There are nine mounting holes on the Rack Base used for attaching to a wall. The locations are indicated below. Using the Rack Base as a template, and while holding the base on the wall in the desired locations, mark the nine hole locations on the wall.

Nine Mounting Locations

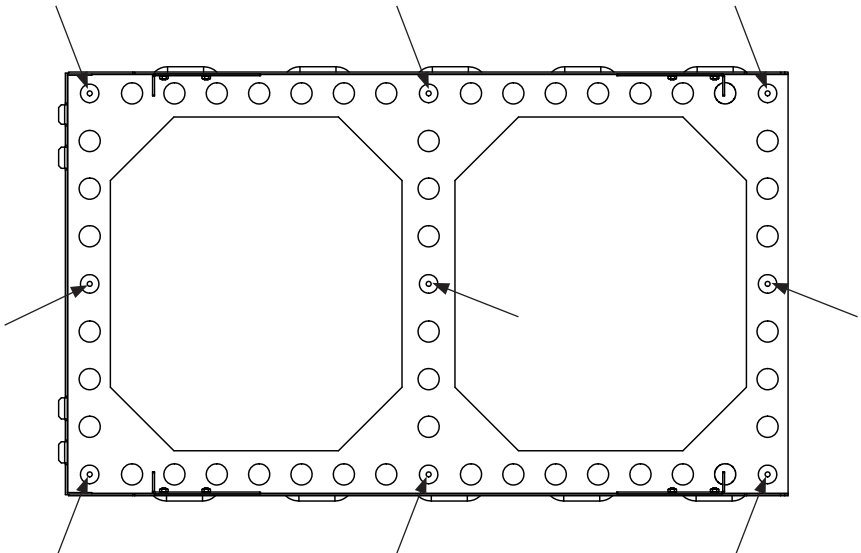


Installation Instructions (continued)

Step 3. Install the Drywall Anchors: Nine Self-Drilling Wallboard Anchors are provided with the kit for wall mounting. Install an anchor at each of the nine locations (marked in Step 2) as follows:


1. Using a #2 cordless or manual screwdriver in the anchor's Phillips recess, press and turn the anchor into the drywall.
2. Continue turning until the anchor is flush.

Step 4. Attach the Rack Base to the Wall: Install the 8-32 x 1.250 Pan Head Screws through each of the nine mounting holes in the Rack Base and into the Drywall Anchors. Partially install a screw into each Anchor before tightening.

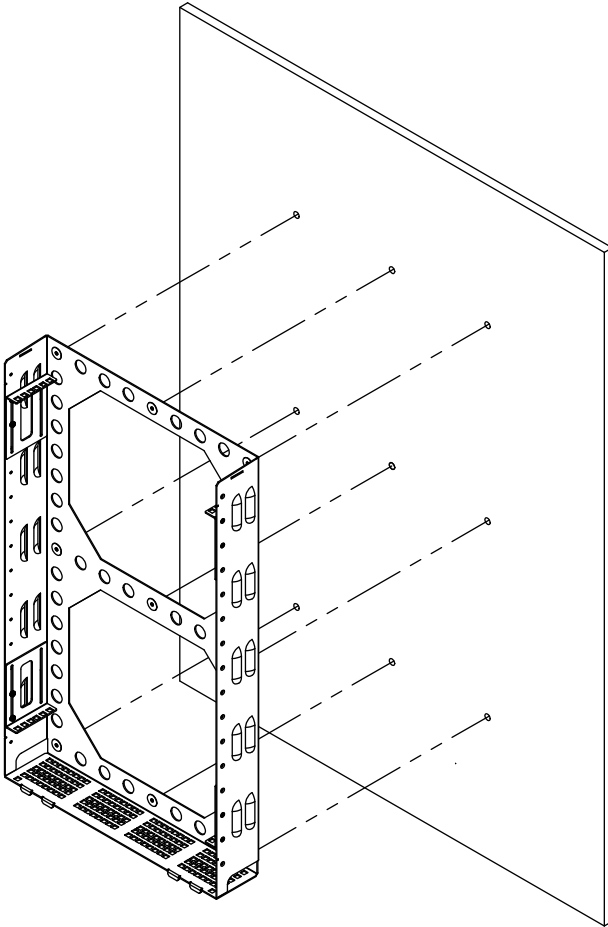

Installation Instructions

Step 5. Adjust the Angle Brackets: The Angle Brackets are adjustable in location, allowing various lengths of slide rails to be attached. Determine the desired location and adjust each Angle Bracket loosening the 2 screws and 2 nuts shown below. Installation of the slide rail may be simplified by leaving the Angle Bracket loose at this time, allowing the Angle Brackets to slide.

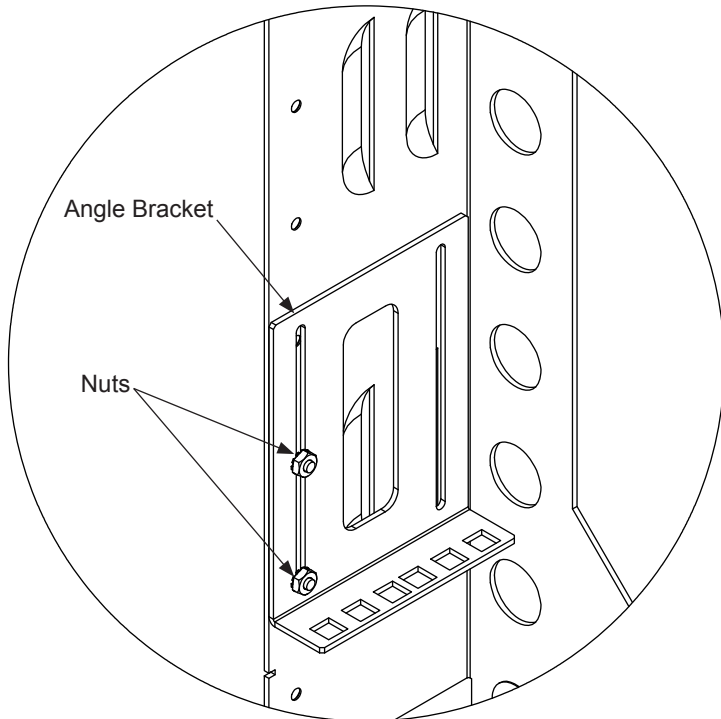


Step 6. Install Rack-Mount Rails: Most 2U Servers require some type of rackmount bracket or sliding rail. There are two main types of rack attachment holes in racks: round threaded holes and square holes. The Angle Brackets use the more common square holes. When threaded holes are required, install the 12-24 Cage nuts into the square holes. Follow the manufacturer's instructions for server rail installation.

Tighten the screws for the Angle Brackets if they were not tightened previously.


Installation Instructions

Step 7. Cover Installation: Place the tabs in the holes on the rear of the cover. Rotate and slide the cover into place.

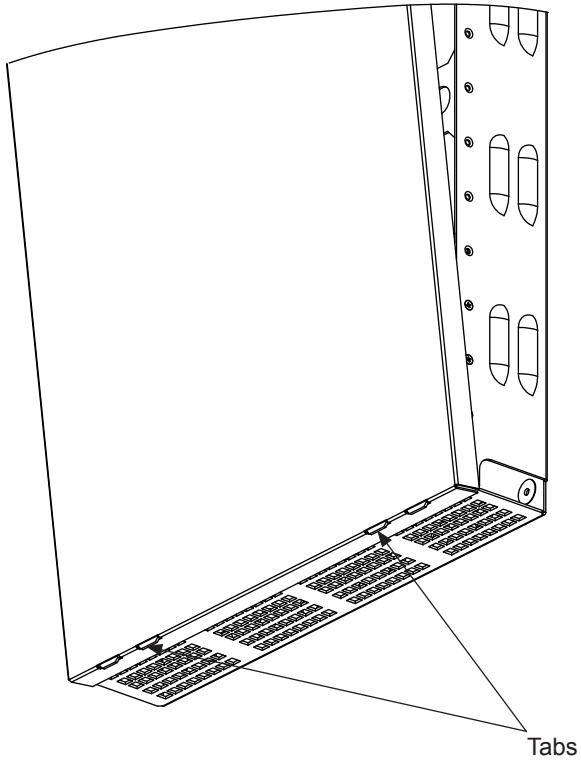

Installation Instructions

Step 8. Lock Bar Installation: Slide the Lock Bar into place as shown below. To secure cover place lock through hole at end of Lock Bar once it is installed.

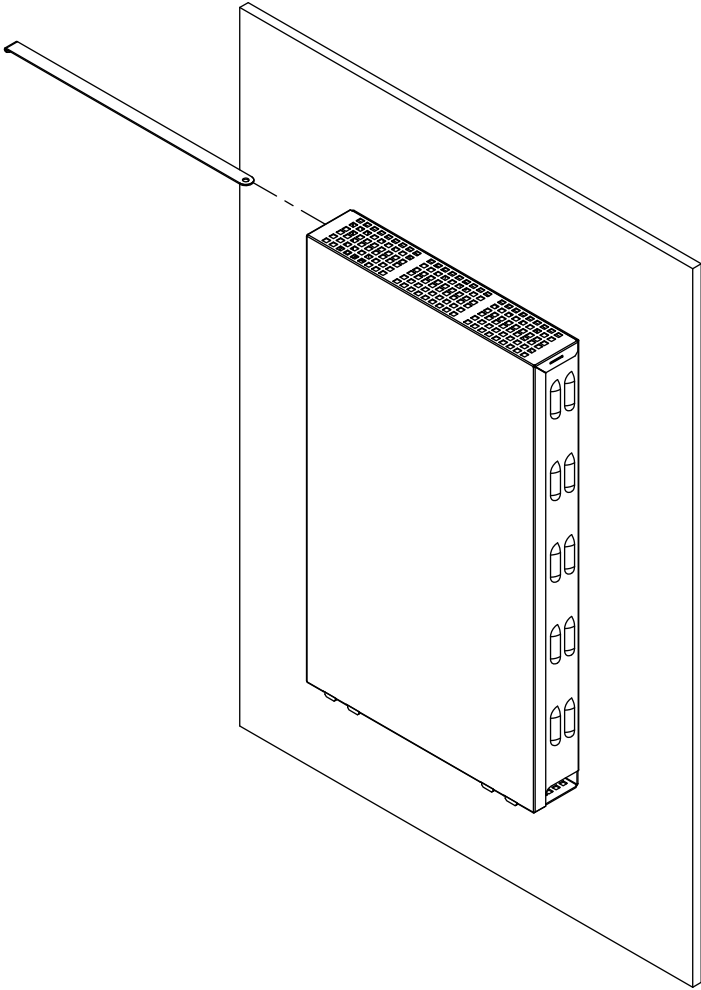



Boldly Creative



Expert Customer Service



Focus On Quality



Ships Same Day

Warranty Statement

Innovation First, Inc. warrants our products against defects in material and workmanship for a period of one (1) year from the date of purchase. Innovation First, Inc. liability shall be limited to repairing or replacing, at our option, any defective product.