










P360 Ultra Blanking Panel

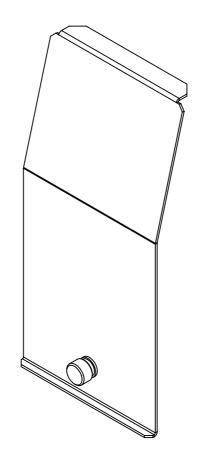

<u>Installation Instructions</u>


Kit P/N: 102-8986

Kit Contents:


(1) P360 Ultra Blanking Panel

Installation Instructions


Step 1 <u>Turn Locking Knob:</u> Turn Locking Knob counter-clockwise until the Locking Bracket is as shown below.

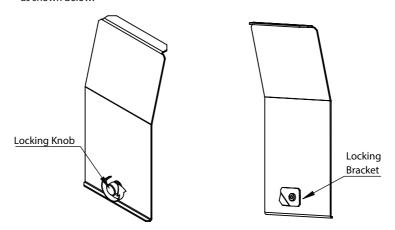


Step 2 Insert Blanking Panel: Insert the Blanking Panel into the desired slot location on the Hypershelf.

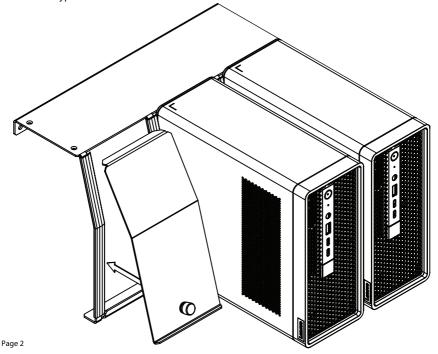

Step 3 Secure the Blanking Panel: Secure the Blanking Panel into place by turning the Locking Knob clockwise.

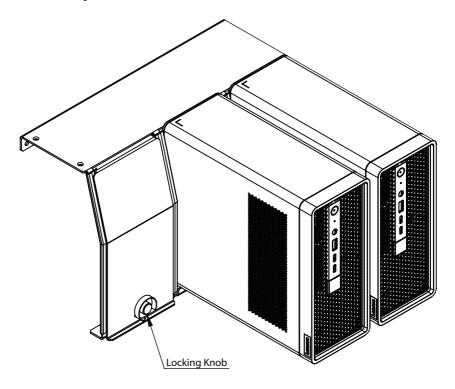

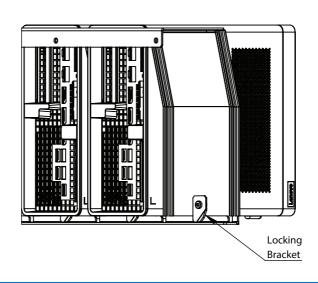



We promise you're going to have a great experience.










You're going to working with us Global company - small town service




Our top notch (in-house) mechanical and electrical engineers are available to solve your toughest custom design challenges.





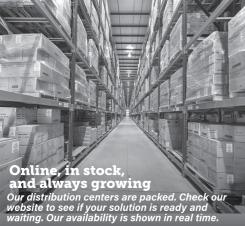

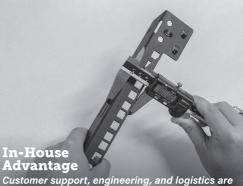

Customer support, engineering, and logistics are standing by to get you whatever answers you need. Even if that means walking down and asking the guy who made it for you.

Warranty Statement

Innovation First, Inc. warrants our products against defects in material and workmanship for a period of one (1) year from the date of purchase. Innovation First, Inc. liability shall be limited to repairing or replacing, at our option, any defective product.