


Apple HomePod Mount

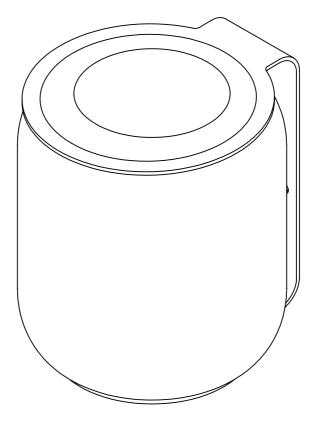


Installation Instructions Kit P/N: 104-8966 104-8991

RackSolutions.com

Kit Contents: (1) Wall Bracket Mounting Hardware: (3) Flat Head Screws (3) Dry Wall Anchors

Apple HomePod Mount Installation Instructions

- Step 1 <u>Determine Location:</u> Select appropriate location on wall. Consider cable routing and length.
- Step 2 <u>Mark Hole Positions:</u> Hold Wall Bracket in position and mark the 3 hole positions shown below with pencil.

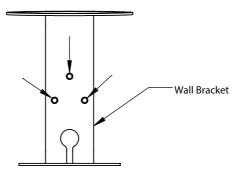

 Step 3
 Install Drywall Anchor:
 Install one Drywall Anchor at each hole mark. Using a #2


 Phillips head screwdriver press the anchor into the drywall while turning clockwise until it is seated flush with the wall.




Page 2

RackSolutions.com

Step 4 Install Wall Bracket: Install the Wall Bracket to the wall using the 3 Flat Head Screws as shown below.

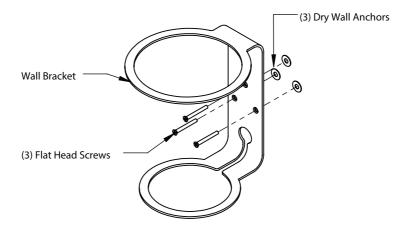

 Step 5
 Install theWall Bracket:
 Place the cord through the bottom hole in the mount. Slide the HomePod into the mount, letting the cord fall through the back slot.

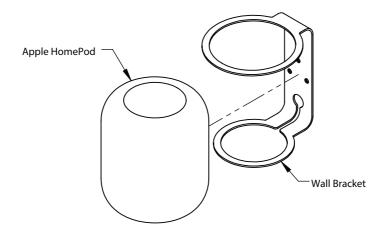

Note: To prevent scratching the top of HomePod, lift the top ring slightly when sliding the HomePod into the Wall Bracket.

Page 3

RackSolutions.com



You're going to **W** working with us Global company - small town service



Warranty Statement

Innovation First, Inc. warrants our products against defects in material and workmanship for a period of one (1) year from the date of purchase. Innovation First, Inc. liability shall be limited to repairing or replacing, at our option, any defective product.



RackSolutions.com