


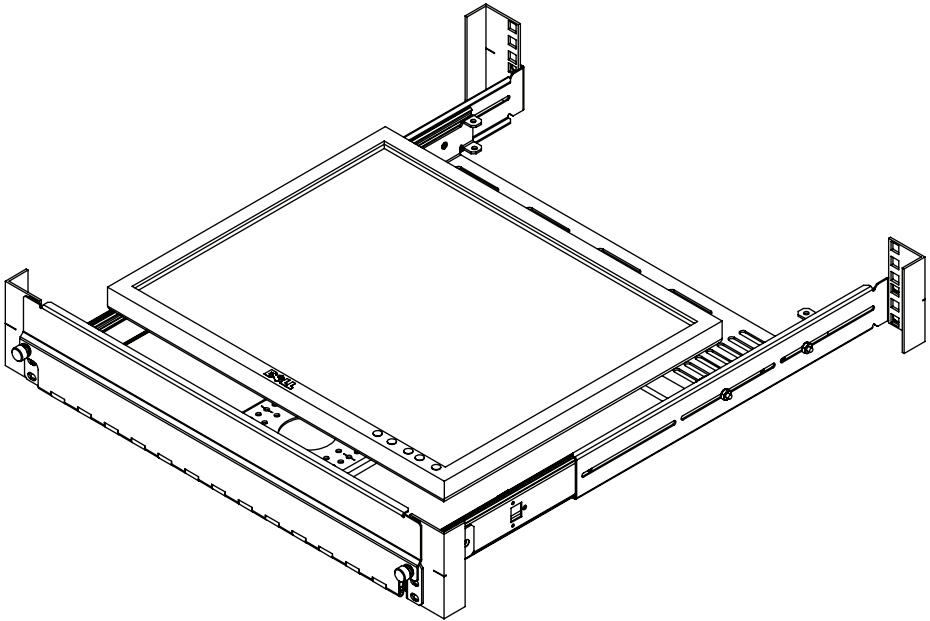

Rack Mount Monitor Tray



Installation Instructions

Kit P/N: 133-2279

Kit Contents

- (1) Partially Assembled Shelf w/ Door
- (2) Long Rear Brackets
- (2) Short Rear Brackets
- (1) Cable (PS2 to USB)
- (2) Cable Power Cord
- (10) 11" Tie Straps


- Rack Mount Hardware x8 Bag:
- (8) 12-24 x 1/2" Pan Head Screws Zinc
 - (8) 10-32 x 1/2" Pan Head Screws
 - (8) 12-24 Cage Nuts
 - (8) 12-24 Square Nuts

- Generic Monitor Hardware Bag:
- (4) 1/8" White Nylon Spacers
 - (4) 1/4" White Nylon Spacers
 - (4) Pan Head Screws M4x6mm
 - (4) Pan Head Screws M4x25mm
 - (4) Pan Head Screws M4x30mm


- Dell 17V/19V Monitor Hardware:
- (4) 1/4" White Nylon Spacers
 - (4) Pan Head Screws M4x14mm
- Rear Hardware Bag:
- (4) 8-32 x 3/8" Pan Head Screws
 - (4) 8-32 Nuts

Installation Instructions

Step 1. Mounting Depth: Measure the mounting depth for your rack from the front mounting surface to the back mounting surface

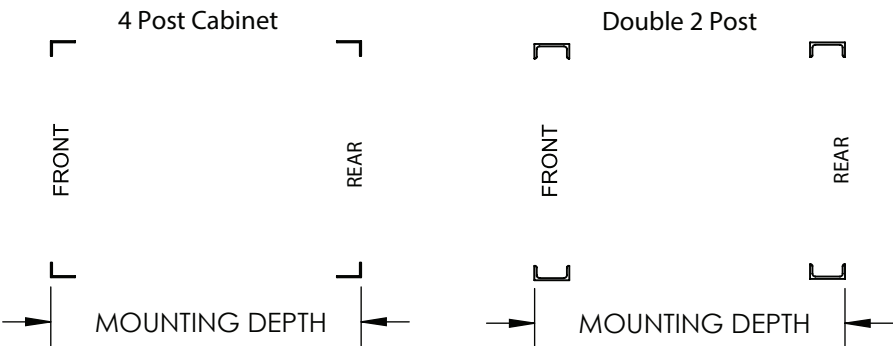


Step 2a. 18.2"-31.5": The rear rack brackets will be installed as shown below for this "Mounting Depth" range (See Step 3 for assembly).

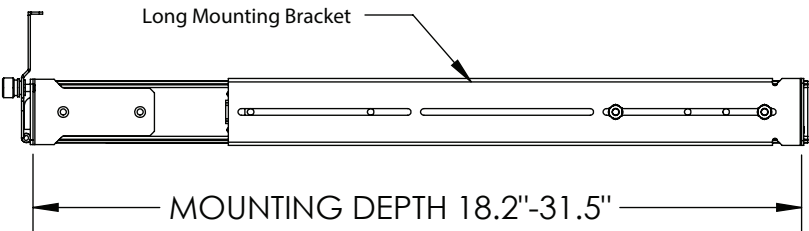


Installation Instructions

Step 2b. 17.5"-18.2": The rear rack brackets will be installed as shown below for this "Mounting Depth" range (See Step 3 for assembly).

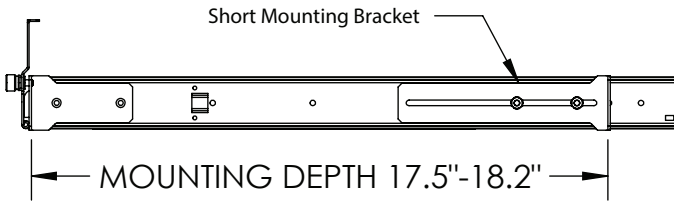


Step 2c. 11.0"-17.5": The rear rack brackets will be installed as shown below for this "Mounting Depth" range (See Step 3 for assembly).

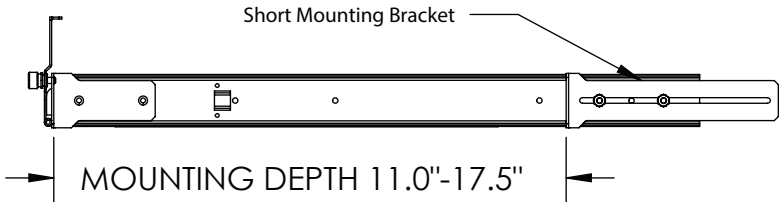


Step 3 Rear Bracket Attachment: Remove outer rails from the shelf. Move the slide rails back approximately 10 inches.

Attach the Rear Rack Brackets as shown below. Attach using (4) 8-32 x 3/8" Truss Head Screws and (4) 8-32 Nuts. Tighten all screws.

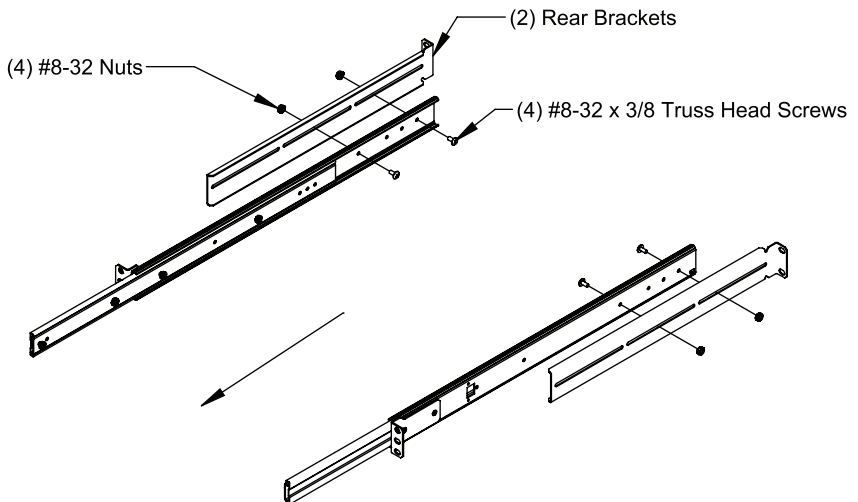


Installation Instructions

- Step 4 **Attach rails to the rack:** Attach the Front and Rear of the rails as shown using the "Rack Mount Hardware". Install cage nuts if needed. Repeat for the other side. Tighten screws on the right side rail. Leave the screws on the left side slightly loose.

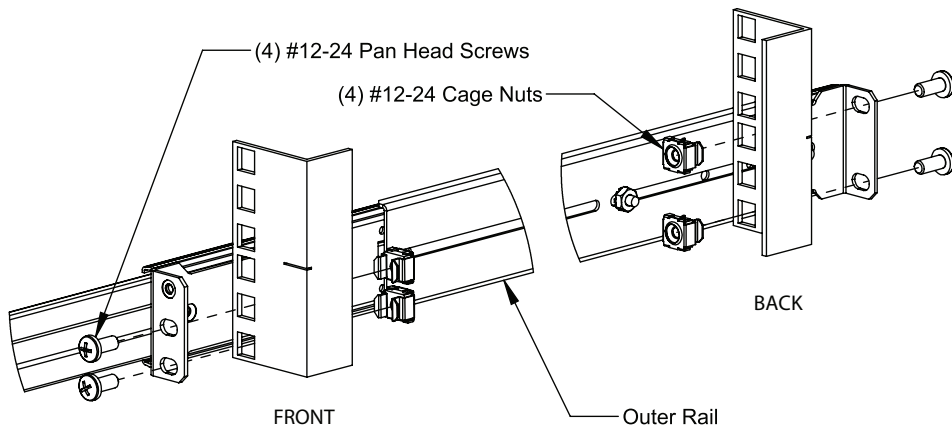


- Step 5 **Monitor Attachment:** Turn the monitor face down on a large flat surface. Locate the four VESA mounting holes on the rear of the monitor.
- Determine if spacers are required:** Some monitors have a "recess" on the rear of the monitor. Spacers are provided to fill this gap. See Table A on page 5 for spacer length options.
 - Determine Screw Length:** Only use the metric M4 screws provided. Screw length is determined by the spacers used (see Table A on page 5).

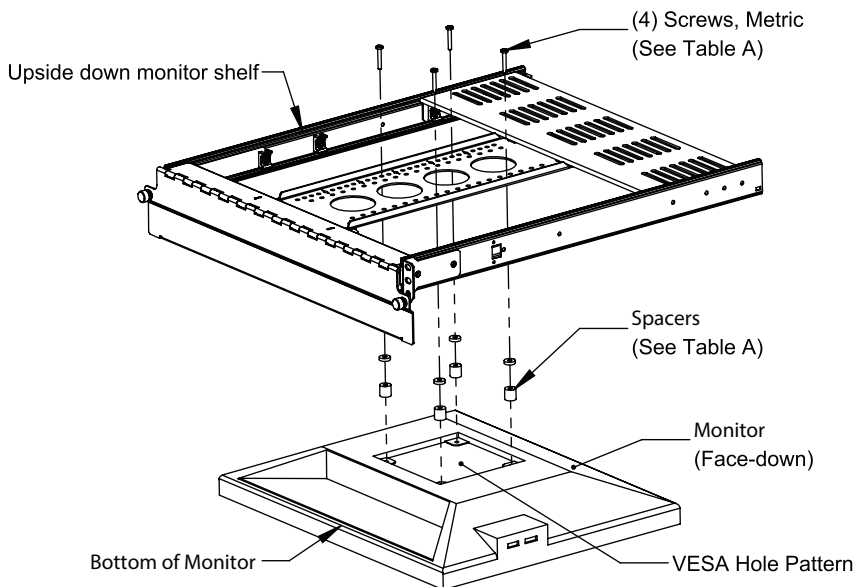

Custom Engineering

Our top notch (in-house) mechanical and electrical engineers are available to solve your toughest custom design challenges.

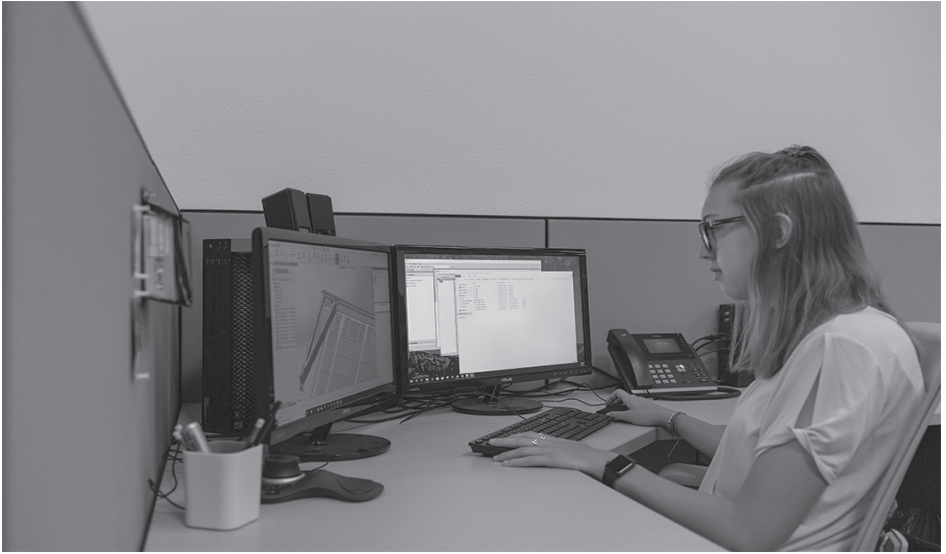


On-Site Manufacturing

Our manufacturing facility is on-site at our Texas headquarters. If we send them a drawing in the morning, we can have parts ready to ship-out that evening.



Installation Instructions

Step 6 Install Equipment: Slide the monitor shelf all the way in. Tighten all screws.

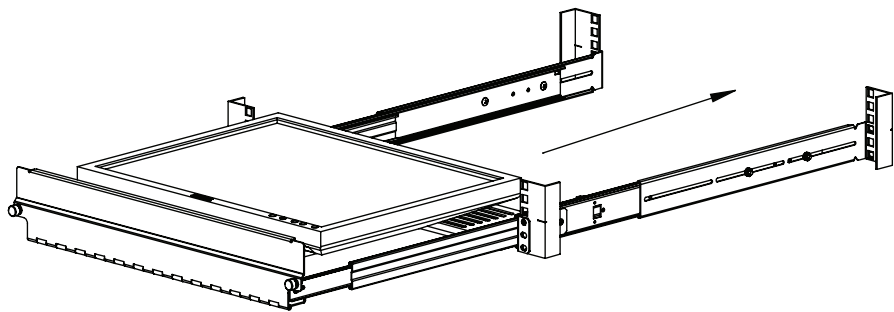

Note: When tightening the loose rails, support the bottom of the shelf to ensure proper rail adjustment.

Note: If installing CMA, refer to CMA instructions at this time.


Online, in stock, and always growing

Our distribution centers are packed. Check our website to see if your solution is ready and waiting. Our availability is shown in real time.



In-House Advantage

Customer support, engineering, and logistics are standing by to get you whatever answers you need. Even if that means walking down and asking the guy who made it for you.

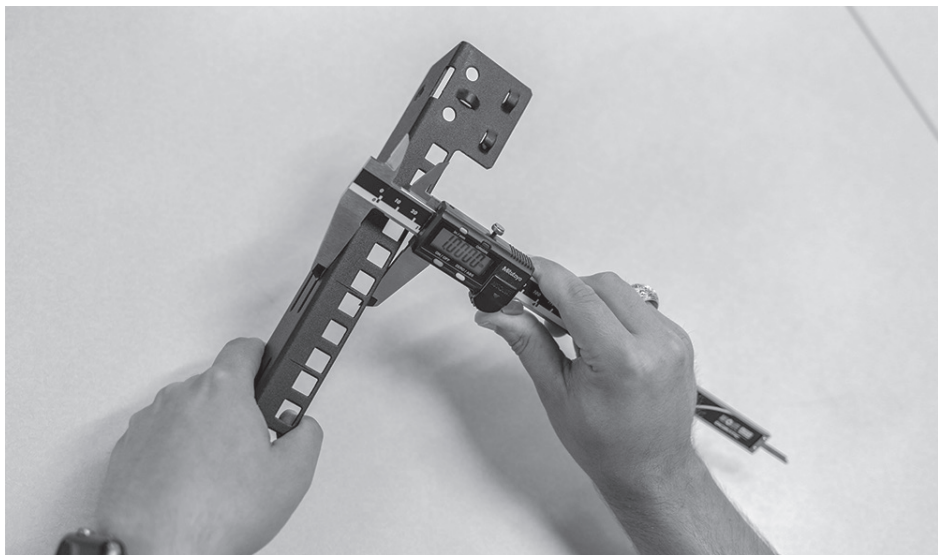



Boldly Creative



Expert Customer Service



Focus On Quality



Ships Same Day

We'll **help** you figure out what **you need**, get it to **you fast**, and we'll **stand behind it**



Warranty Statement

Innovation First, Inc. warrants our products against defects in material and workmanship for a period of one (1) year from the date of purchase. Innovation First, Inc. liability shall be limited to repairing or replacing, at our option, any defective product.