



Boldly Creative



Expert Customer Service




Focus On Quality



Ships Same Day

Rack Mount Monitor Tray with Keyboard

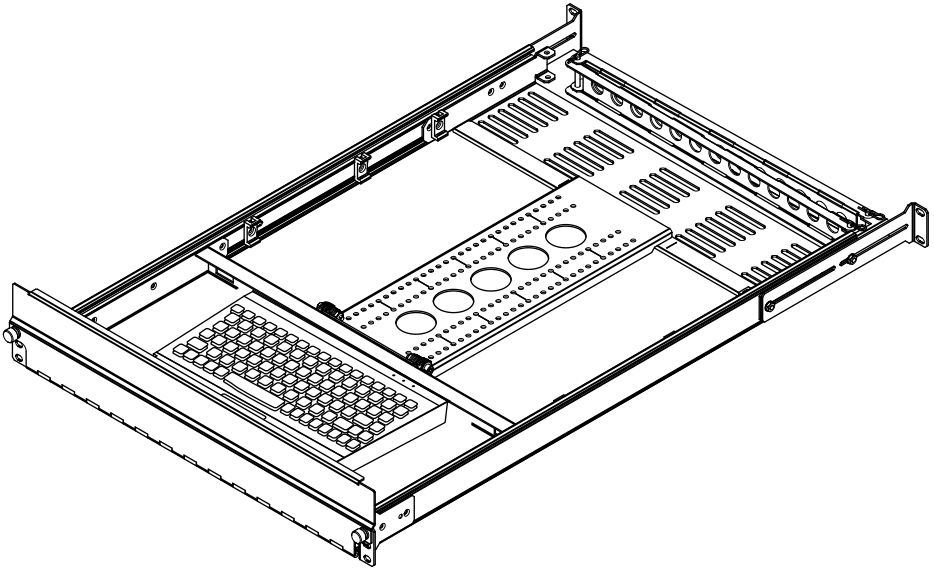

Installation Instructions

Kit P/N: 2UKVM-125

Kit P/N: 2UKVM-135

Kit Contents

- (1) Partially Assembled Shelf w/Door
- (1) Mini Black Keyboard (PS2)
- (1) Cable (PS2 to USB)
- (2) Rear Brackets
- (1) Cable Management Bracket
- (2) Cable Management Arms
- (18) 11" Tie Straps

Generic Monitor Hardware Bag:

- (4) 1/8" White Nylon Spacers
- (4) 1/2" White Nylon Spacers
- (4) Pan Head Screws M4x6mm
- (4) Pan Head Screws M4x25mm
- (4) Pan Head Screws M4x30mm

Rear Hardware Bag:

- (4) 8-32 x 3/8" Pan Head Screws
- (4) 8-32 Nuts

Dell 17V/19V Monitor Hardware:


- (4) 1/4" White Nylon Spacers
- (4) Pan Head Screws M4x14mm

Rack Mount Hardware x8 Bag:


- (8) 12-24 x 1/2" Pan Head Screws Zinc
- (8) 10-32 x 1/2" Pan Head Screws
- (8) 12-24 Cage Nuts
- (8) 12-24 Square Nuts

Installation Instructions (4 Post)


Step 1. Mounting Depth: Measure the "Mounting-Depth" for your rack from the front of the "Front-Mounting-Surface" to the back of the "Back-Mounting-Surface".

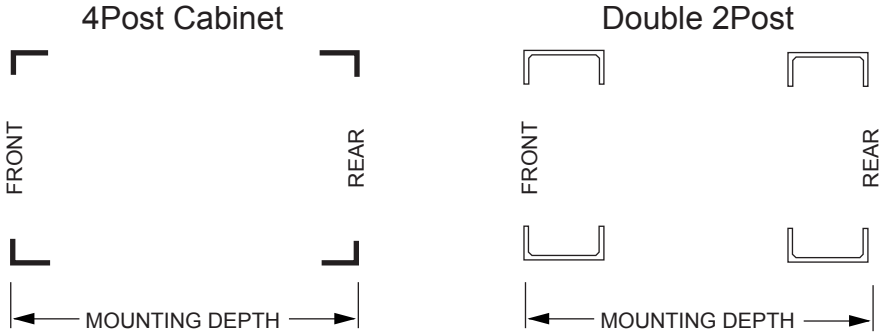

Step 2. 23.5" to 31.5": The Rear Rack Brackets will be installed as shown below for this "Mounting Depth" range (See Step 4 for assembly).

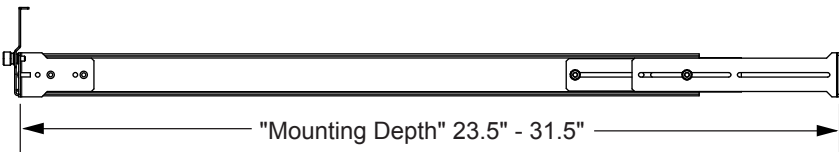

Step 3. 15.5" to 23.5: The Rear Rack Brackets will be installed as shown below for this "Mounting Depth" range (See Step 4 for assembly).

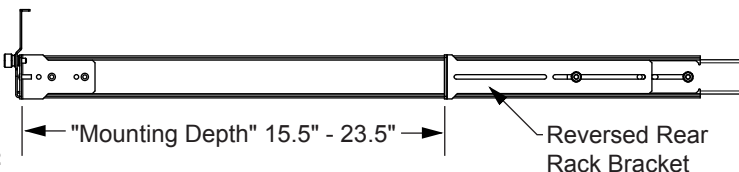


Installation Instructions

Step 4. Rear Bracket Attachment: Move the slide rails back approximately 10 inches. You may need to loosen the thumb screws to do this.

Attach the Rear Rack Brackets and the Cable Arm Extension as shown below. Attach using (4) 8-32 x 3/8" Pan Head Screws and (4) 8-32 Nuts. The screws should be located in the slots as far apart from one another as possible (see below). Tighten all screws.

The Cable Arm Extension can be attached to the right or left, based on your cabling needs.

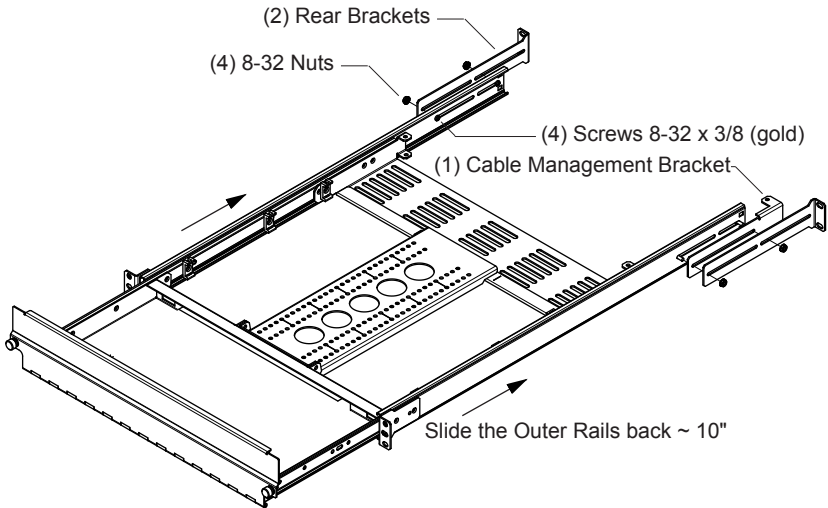

Installation Instructions

- Step 5. Monitor Attachment:** Turn the monitor face down on a large flat surface. Locate the four VESA mounting holes on the rear of the monitor.
- Determine if spacers are required:** Some monitors have "recess" on the rear of the monitor. Spacers are provided to fill this gap. See Table A for spacer length options.
 - Determine Screw Length:** Only use the metric M4 screws provided. Screw length is determined by the spacers used (see Table A).



















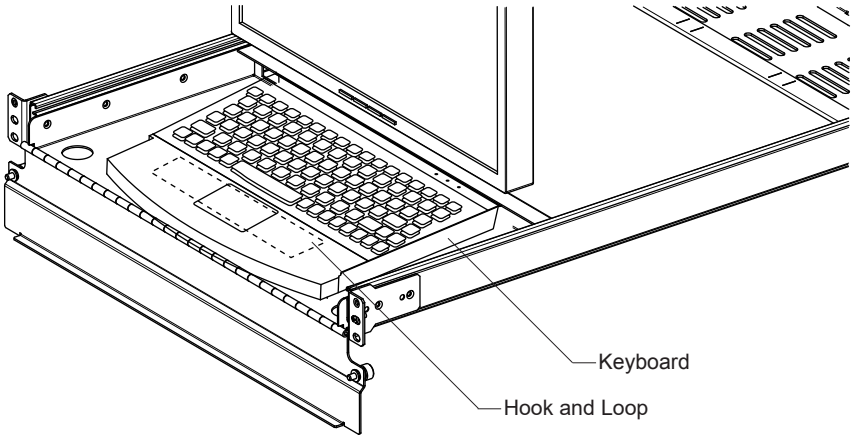
Table A

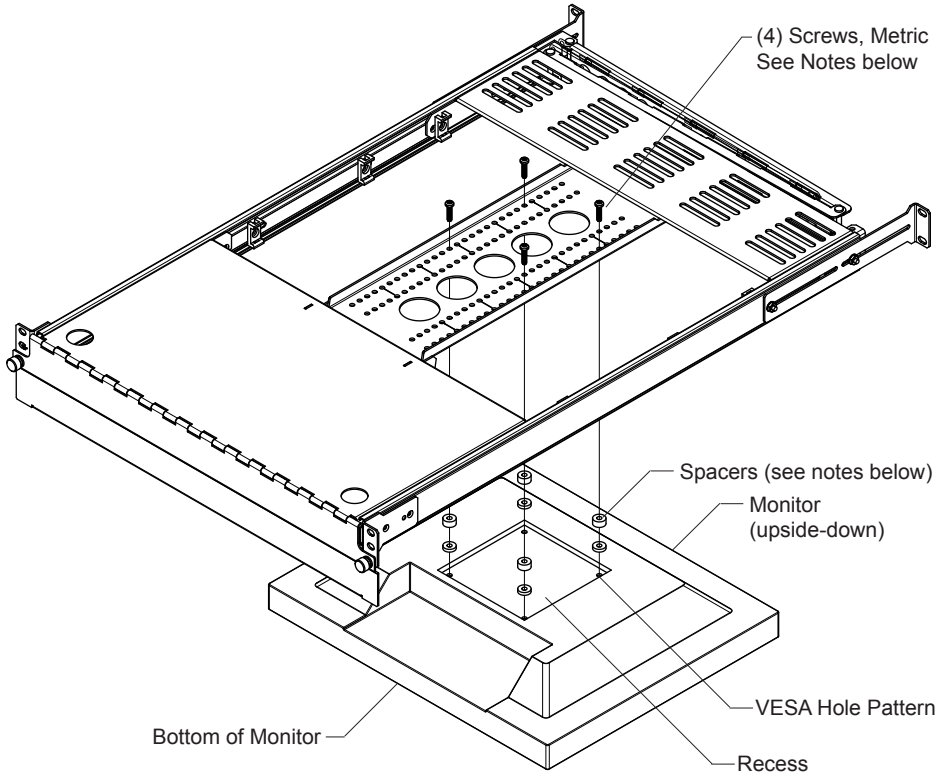Recess Depth	Spacer	Screw
0		 6mm
.125 (1/8)		 12mm
.250 (1/4)		 14mm
.375 (3/8)		 18mm
.500 (1/2)		 25mm
.625 (5/8)		 25mm
.750 (3/4)		 30mm
.875 (7/8)		 30mm


Screws and Spacers are Shown to Scale

Installation Instructions

Step 6. Attach Keyboard: Remove adhesive backing on hook and loop (on bottom of keyboard) and attach keyboard to shelf.




Step 7. Attach Cables:

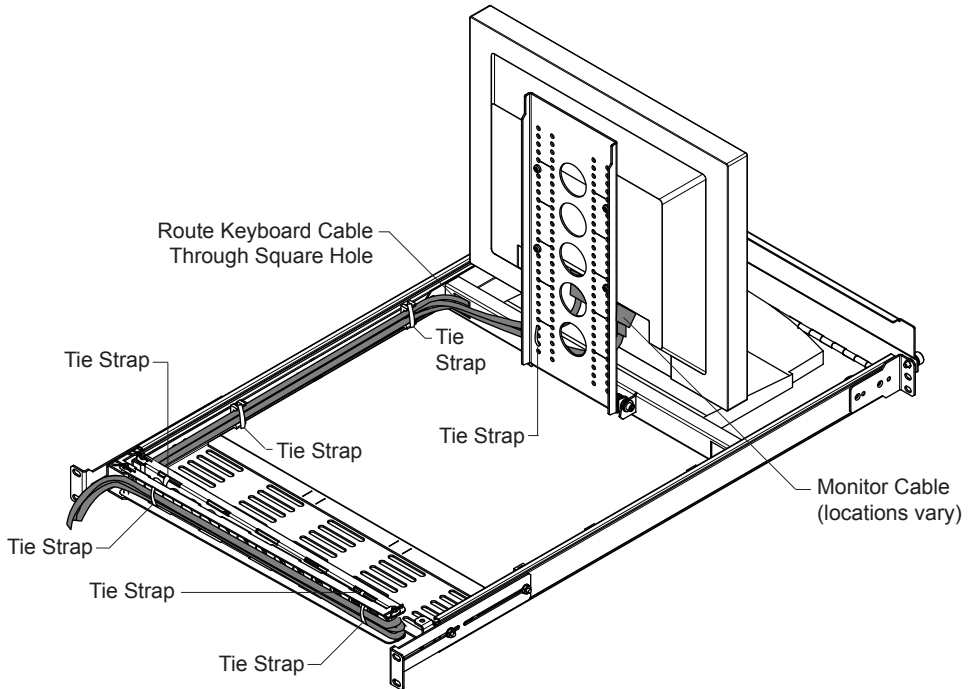

Installation Instructions

Monitor Mounting Guide

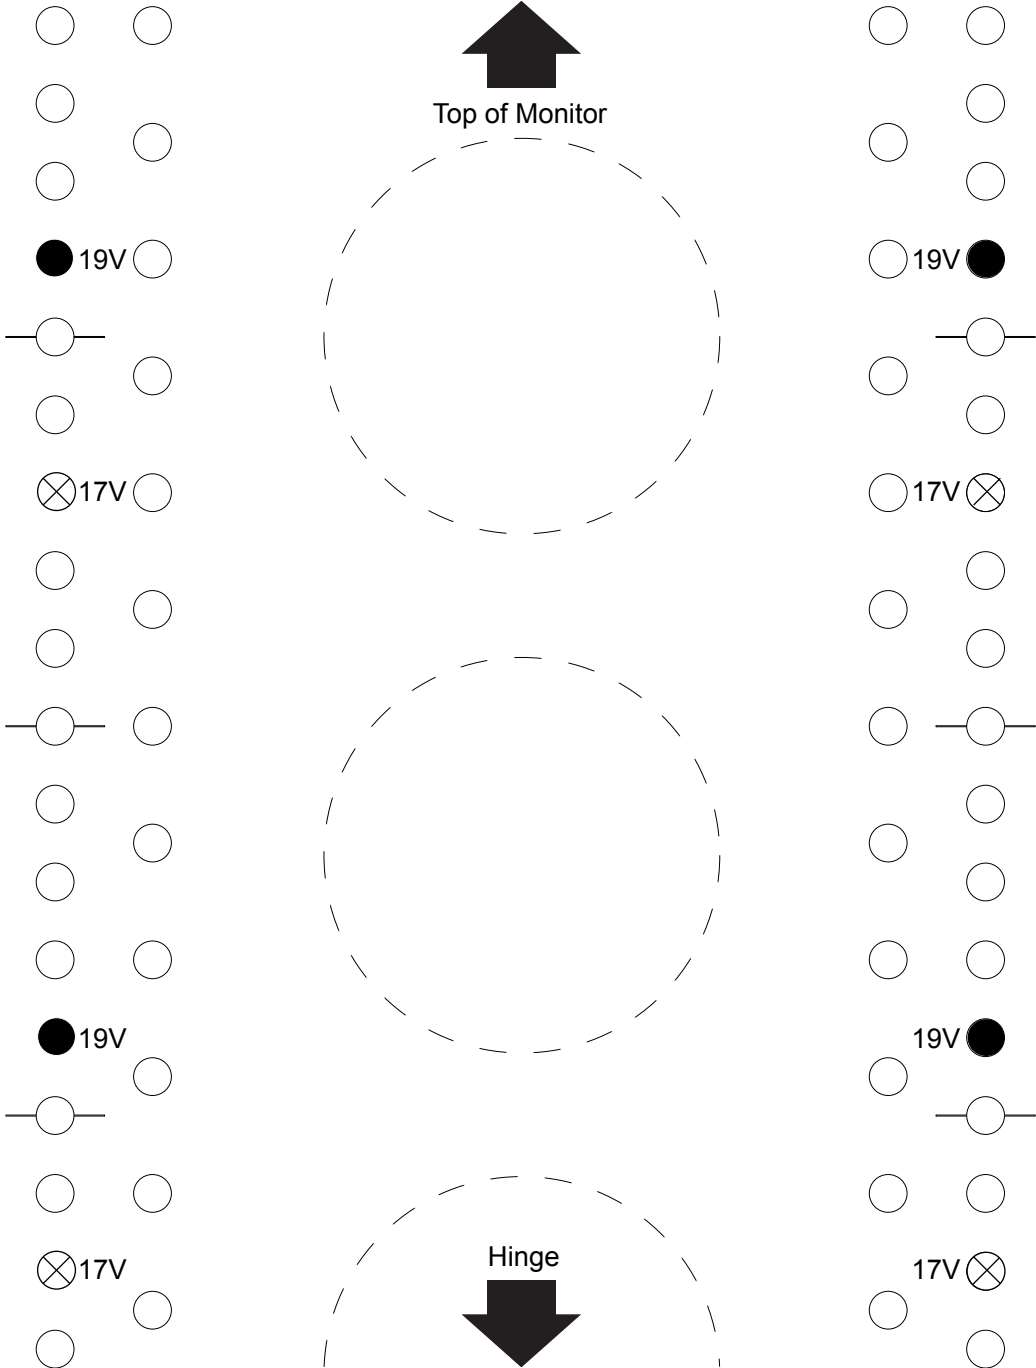



Boldly Creative



Expert Customer Service



Focus On Quality



Ships Same Day

Warranty Statement

Innovation First, Inc. warrants our products against defects in material and workmanship for a period of one (1) year from the date of purchase. Innovation First, Inc. liability shall be limited to repairing or replacing, at our option, any defective product.

245 289 465 530