SFF/Slim PC Wall Mount

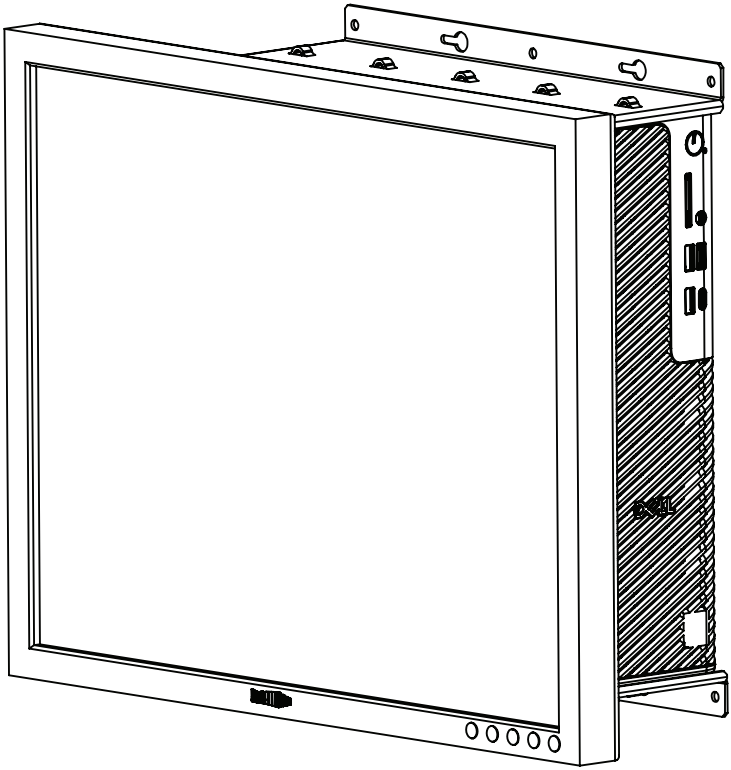

Installation Instructions

Kit P/N: 104-5490
104-8903
104-8941

Kit Contents

Kit Contents:
(1) Main Bracket

Wall Mount Hardware Package:
(4) Pan Head Screw
(4) Anchors

Monitor Hardware Package:
(8) Nylon Spacers
(5) M4 x 10mm Flat Head Screws
(5) M4 x 12mm Flat Head Screws
(5) M4 x 20mm Flat Head Screws

PC Wall Mount Installation Instructions

Step 1 Determine Location: Select an appropriate location on the wall. Consider cable routing and length.

Step 2 Mark Hole Positions: Hold the base in position and mark 4 hole positions with a pencil.

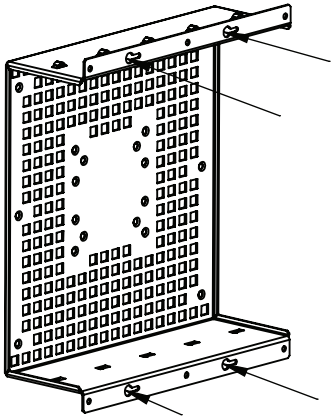

Step 3a Install Drywall Anchor: Install one drywall anchor at each hole mark. Using a #2 Philips head screwdriver press the anchor into the drywall while turning clockwise until it is seated flush with the wall.

Step 3b Install 4 Screws: Leave 1/4" of each screw protruding out of the wall.

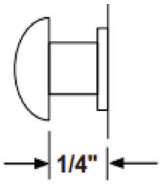

RackSolutions.com If we can't mount it , no one can.

Step 4 Monitor Attachment: Turn the monitor face down on a large flat surface. Locate the four VESA mounting holes on the rear of the monitor.
a. Determine if spacers are required: Some monitors have a "recess" on the rear surface. Spacers are provided to fill this gap. See Table A for spacer length options.
b. Determine Screw Length: Only use the metric M4 screws provided. Screw length is determined by the spacers used (see Table A).

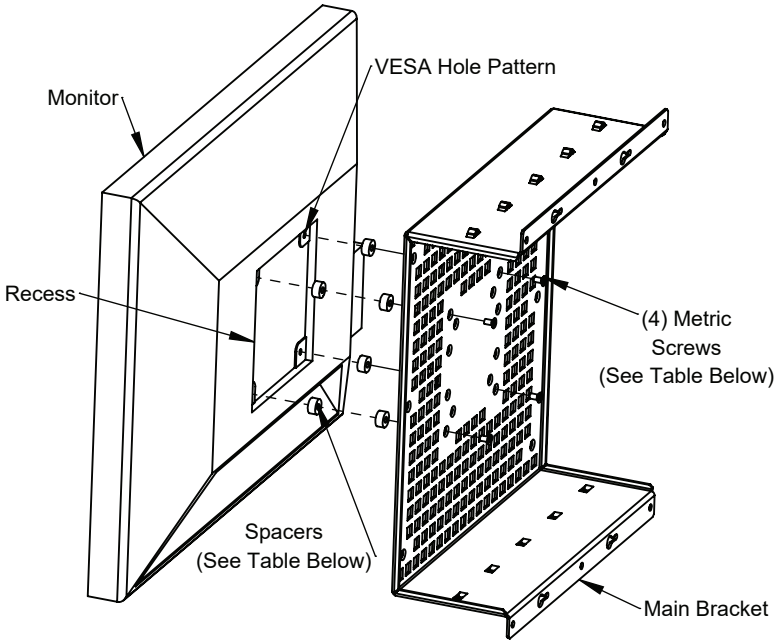

Table A

Recess Depth	Spacer	Screw
0	No Spacer Needed	10mm
.250 (1/4)		12mm
.500 (1/2)		20mm

Screws and Spacers are Shown to Scale

RackSolutions.com If we can't mount it , no one can.

Step 5 Computer Attachment: Slide the computer into the Main Bracket.

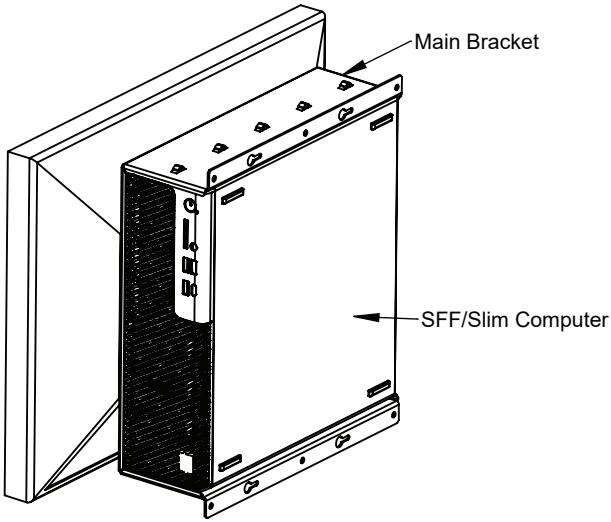

Step 6 Attach Mount Base: Attach the base to the wall using the 4 srews that were installed in 3b. Tighten securely.

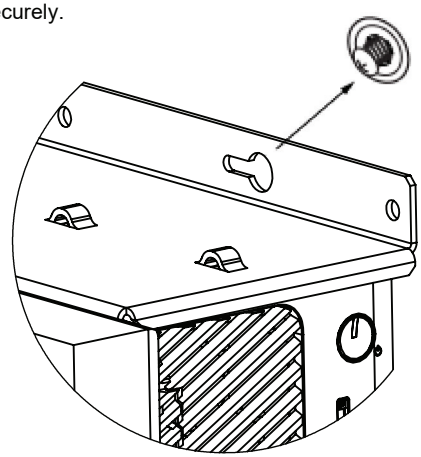

Warranty Statement
Innovation First, Inc. warrants our products against defects in material and workmanship for a period of one (1) year from the date of purchase. Innovation First, Inc. liability shall be limited to repairing or replacing, at our option, any defective product.