










Adjustable 2-Post Shelf

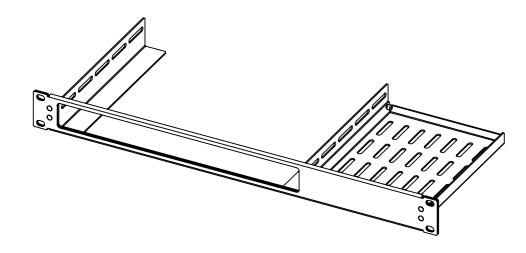

Installation Instructions

Kit P/N: 108-6899

Kit Contents

Kit Contents:


- (1) Adjustable 2-Post Shelf
- (1) #10-32 Phillips Head Screw
- (2) Push-In Bumpers
- (1) Hook and Loop

Rack Mount Hardware x4:


- (4) #10-32 Phillips Head Screws
- (4) #12-24 Phillips Head Screws
- (4) #12-24 Square Nuts
- (4) #12-24 Cage Nuts

Installation Instructions


Step 1 Unlock the Shelf: Loosen the #10-32 Screw attached to the shelf, but do not remove it.

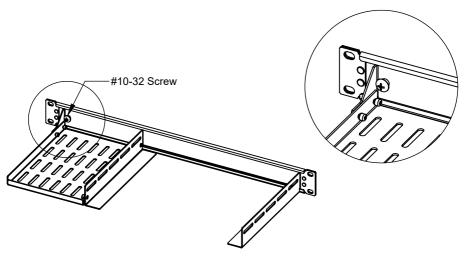


Step 2 Adjust Shelf Position: Slide the shelf to an appropriate width for mounting the device.

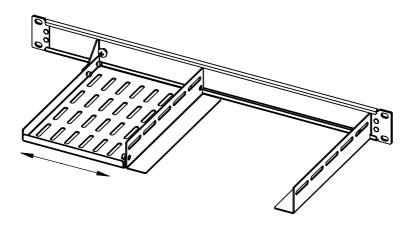

Step 3 Install Device and Lock Shelf in Position: Place the device on the shelf and tighten the #10-32 Screw to lock the shelf into place.

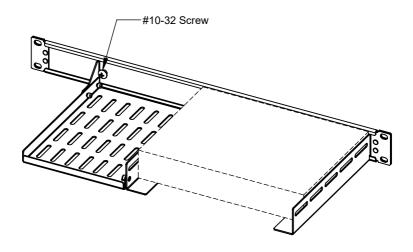

Step 4 <u>Install Push-In Bumpers:</u> Slide the Push-In Bumpers to an appropriate location along the rear slots to secure the back of the device.

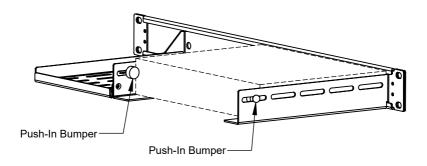



We promise you're going to have a great experience.










Installation Instructions

Step 5 Mount the Shelf: Using the hardware pack, Rack Mount Hardware x4, install the #12-24 Cage Nuts to the rack and then screw the shelf into the Cage Nuts with the #12-24 Screws.

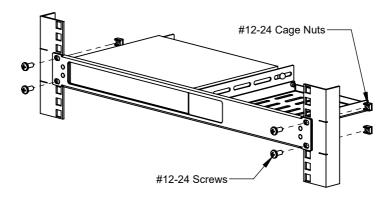

Step 6 Install Hook and Loop: If necessary, secure any device accessories in the side shelf with hook and loop.

Warranty Statement

Innovation First, Inc. warrants our products against defects in material and workmanship for a period of one (1) year from the date of purchase. Innovation First, Inc. liability shall be limited to repairing or replacing, at our option, any defective product.

